



# INSTALLATION INSTRUCTIONS

Accessory  
DOOR EDGE GUARDS


Application  
2012 CR-V

Publications No.  
All 12070


Issue Date  
DEC 2011

## PARTS LIST

Right front door edge guard

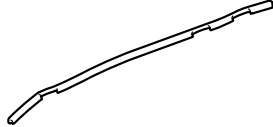

Left front door edge guard

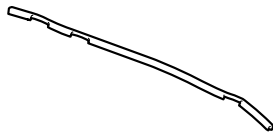


Right rear door edge guard



Left rear door edge guard



 
Seam sealant cutting tool



## TOOLS AND SUPPLIES REQUIRED

Rubber mallet  
Felt-tip pen  
Touch-up paint

## Illustration of the Door Edge Guards Installed on the Vehicle

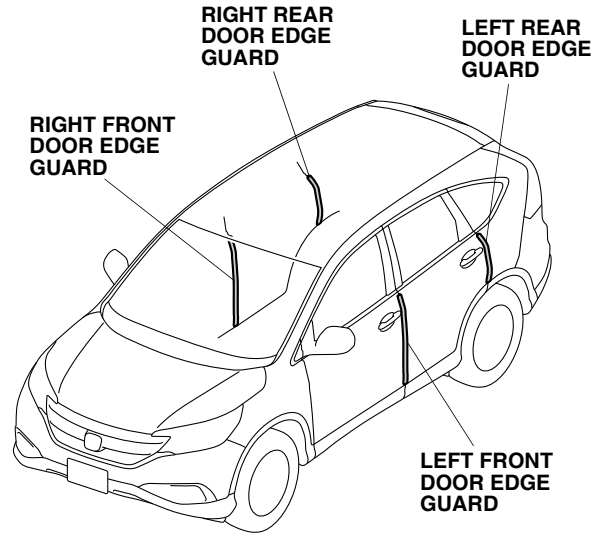

## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

**NOTE:** These instructions show the right door edge guard being installed. The same procedure applies to installing the left door edge guard.


1. Clean and wax the areas to be covered with a high quality paste wax.
2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.

### Installing the Front Door Edge Guard

3. Gently place the right front door edge guard on the right front door while aligning it with the contour of the door. Mark the sealant at the top and bottom edges of the right front door edge guard.

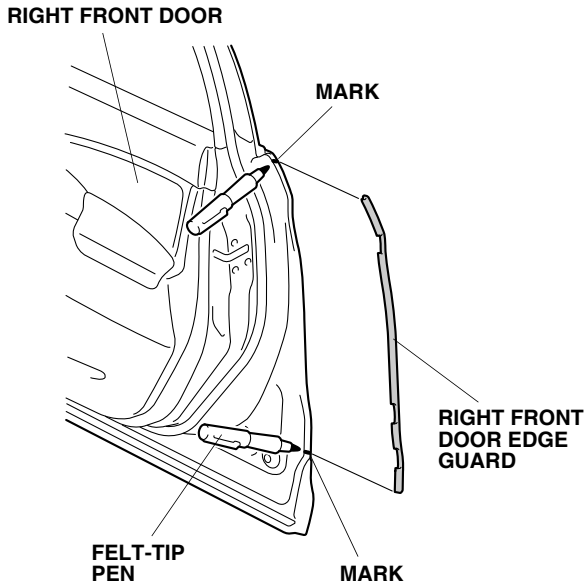


4. Remove the right front door edge guard.
5. Position the cutting edge of the seam sealant cutting tool against the door edge and trim the seam sealant from mark to mark. The cutting tool only cuts in one direction.

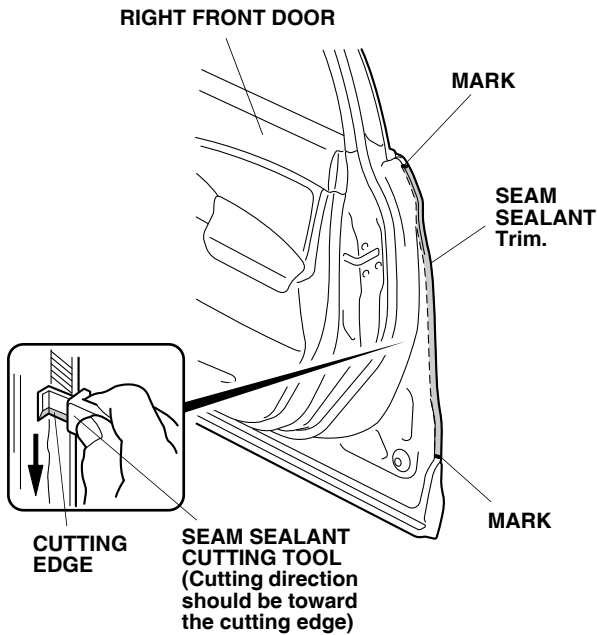


6. Apply touch-up paint to the cut seam sealant area, and let it dry thoroughly.

7. Position the right front door edge guard on the right front door edge and align it with the marks made in step 3.

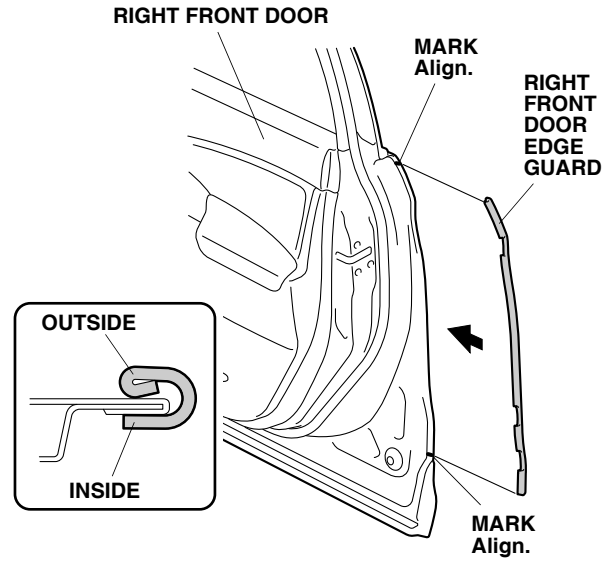


8. Starting at the feature line, tap the right front door edge guard into position with a series of light taps using a rubber mallet, then work up and down. Make sure the position of the right front door edge guard is correct. Once in place, do not remove, reposition, or reinstall the right front door edge guard.

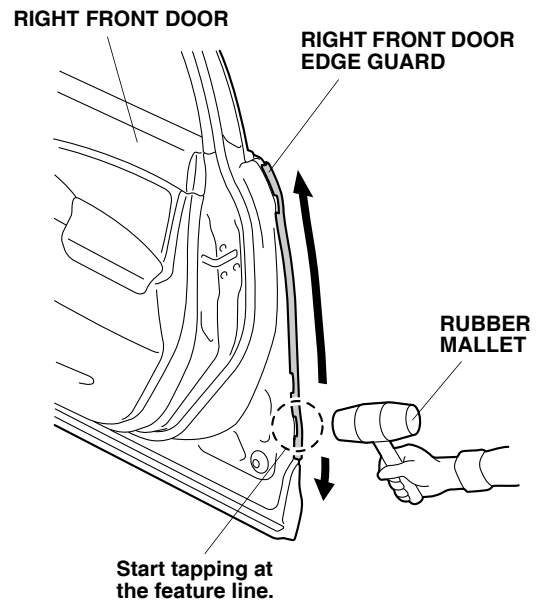


## Installing the Rear Door Edge Guard

9. Gently place the right rear door edge guard on the right rear door while aligning it with the contour of the door. Mark the sealant at the top and bottom edges of the right rear door edge guard.

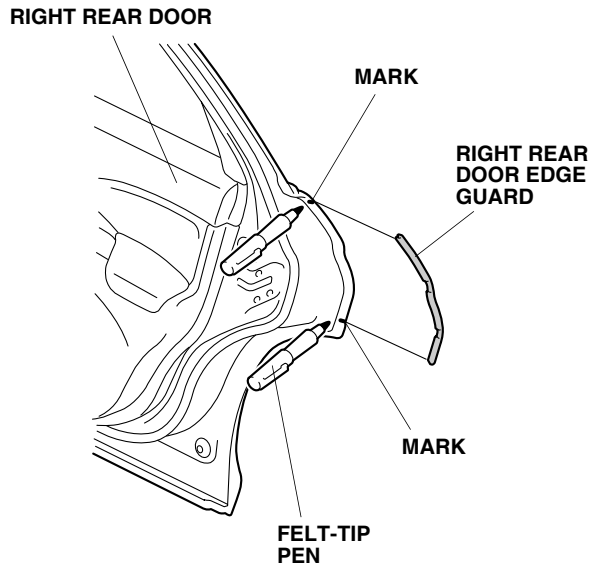


10. Remove the right rear door edge guard.
11. Position the cutting edge of the seam sealant cutting tool against the door edge and trim the seam sealant from mark to mark. The cutting tool only cuts in one direction.

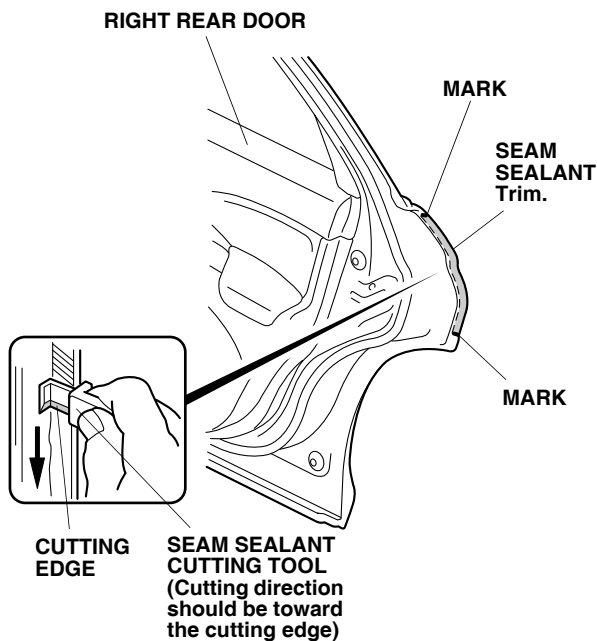


12. Apply touch-up paint to the cut seam sealant area, and let it dry thoroughly.

13. Position the right rear door edge guard on the right rear door edge and align it with the marks made in step 9.

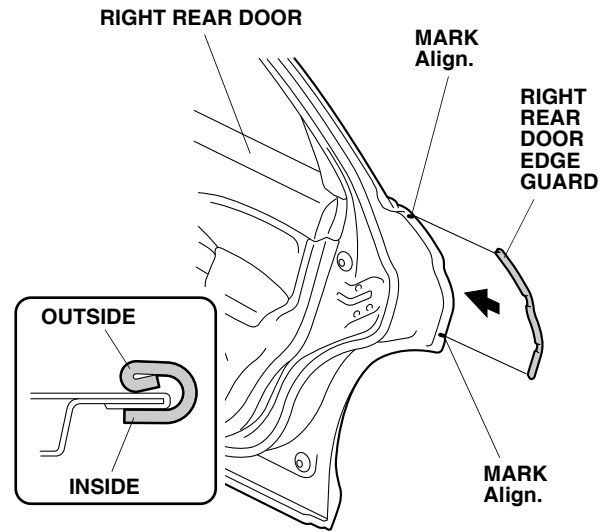

14. Starting at the feature line, tap the right rear door edge guard into position with a series of light taps using a rubber mallet, then work up and down. Make sure the position of the right rear door edge guard is correct. Once in place, do not remove, reposition, or reinstall the right rear door edge guard.

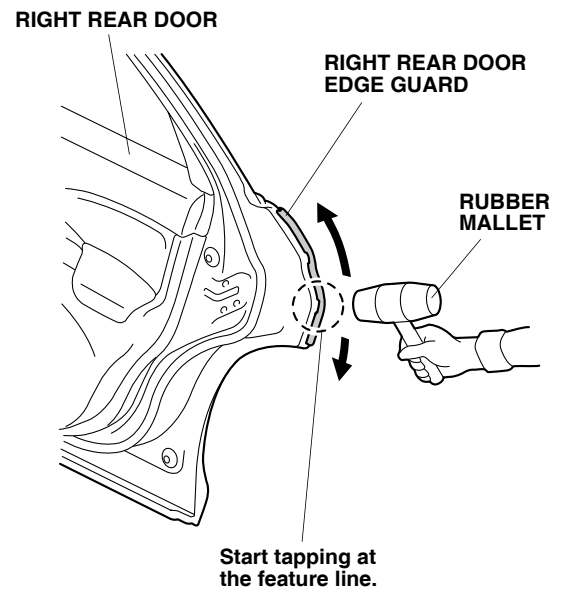

15. Repeat steps 3 through 14 to install the door edge guards on the left side of the vehicle.